


CMMR series


45° first surface mirrors

! Make sure to perform this procedure in a clean, non-dusty environment in order to prevent dust or other particles from entering the product.


Positioning instructions

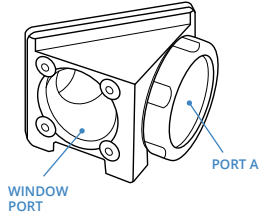


1 CMMR ports layout

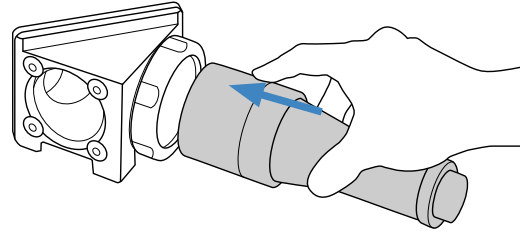

2 Insert the front part of the telecentric lens into port A of the CMMR

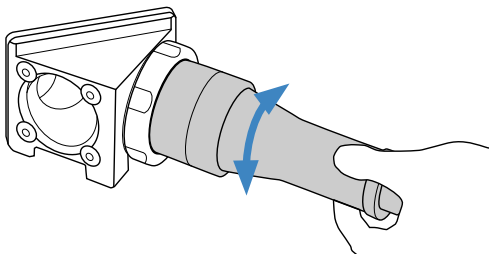


3 Rotate CMMR until you achieve the desired angular alignment.

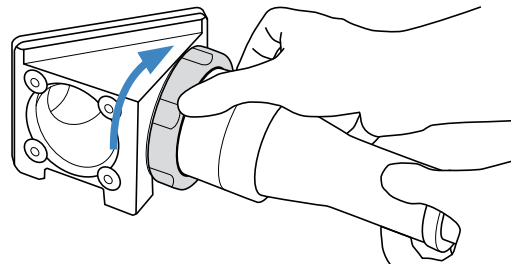


4 Push CMMR against the telecentric lens and tighten the locking ring until it is securely hold in place.

Additional clamping mechanics are required to adequately support combination of CMMR with telecentric lenses and illuminators. CMHO series clamping mechanics can be used prior to verification of mechanical compatibility (see CMHO series mechanical drawings available online). **CMHO is not compatible with the combination of the following two products: CMMR and TC13xxx**


How to position the protective window WI (optional accessory)

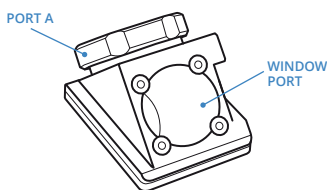


1 CMMR ports layout

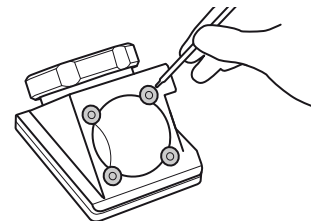

2 Remove the four holding buttons using an Allen key (M3 screws)

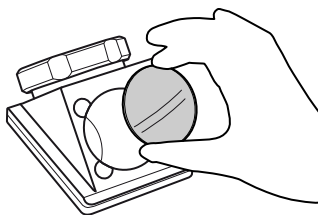

3 Position protective window WI

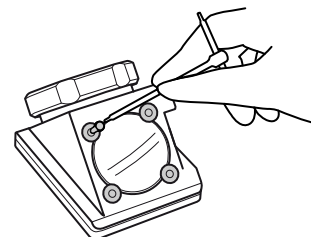

4 Insert and lock in place the four holding buttons using an Allen key (M3 screws)