

LTLNC100-B | DATASHEET

LED line light 100 mm, blue, 475 nm







SPECIFICATIONS

Lighting specifications

Illumination area width	(mm)	100
Illumination area height	(mm)	15
Optimal working distance	(mm)	20-100
Number of LEDs		21
Light color, Peak wavelength		blue, 475 nm
Spectral FWHM	(nm)	25
Illuminance ¹	(klux)	n.a.
Irradiance ¹	(W/m ²)	-

Electrical specifications

Supply voltage ²	(V)	24
Current ²	(mA)	1050
Power consumption	(W)	26
Typical pulse voltage	(V)	31
Max pulse current	(mA)	3000
Peak power consumption	(W)	93
Max pulse duration	(ms)	100
Max duty cycle	(%)	5
Estimated MTBF ⁴	(hours)	> 20000
Connector		M8

¹ Measured at minimum working distance

Included cable

KEY ADVANTAGES

Ultra high power

Color matched white model

Condenser lens for a perfectly focused beam of light

Rugged industrial design with built in industrial connector for easy integration into any machine vision system.

Forced air cooling option

LTLNC series are ultra-high power LED line illuminators designed for line scan applications. Their special design provides both a powerful and homogeneous beam of light that is sharply focused onto the object that must be inspected, by means of a condenser lens.

Mechanical specifications

Length	(mm)	150.0
Width	(mm)	32.0
Height	(mm)	60.0
Mass	(g)	150
Clamping system	4:	x M3 threaded holes
Cooling method	air compressed cooling or passive	

Environment

Operating temperature	(°C)	0-40
Storage temperature	(°C)	0-50
Operating relative humidity	(%)	20-85, non condensing
Installation		Indoor use only

Eye safety

Risk group (CEI EN 62471:2010)	Risk group 2
--------------------------------	--------------

COMPATIBLE PRODUCTS

Full list of compatible products available here.



A wide selection of innovative machine vision components.

CBLT003 included


 $^{^{2}}$ $\pm 2\%$

³ With constant driving voltage


⁴ Drop tp 50% intensity @ 25°C



CONNECTOR PINOUT



Function	Cable color	
LED +	Brown	
LED +	White	
LED -	Blue	
LED -	Black	

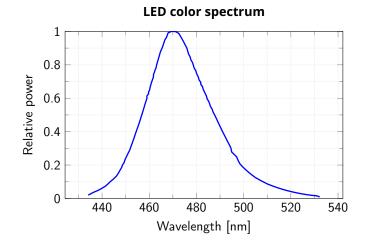

LIGHT BEAM COARSE ADJUSTMENT

Simply untighten the lateral screws to adjust the axial position of the condenser lens.

When the position is set, do not overthighten the screws to avoid damage to the condenser lens.



ADDITIONAL INFO

Lighting structure

